

## 0 at 1700

**R : Replace**

		Miles	310	1864	3728	5592	7456	9320	11184	13048	14912	16777	18641	
		Kms(x1000)	0.5	3	6	9	12	15	18	21	24	27	30	
1	Engine Oil		1700	3200	4700	6200	7700	9200	10700	12200	13700	15200	16700	
2	Engine Oil Filter Element		1700		4700	Check level at every 310 miles or earlier as required								
3	Fuel hose					6200	7700		10700		13700		16700	
4	Spark plug - 2nos.							9200						
5	Air filter element						7700				13700			
6	Rubber hose, Air filter to Carburettor						7700				13700			
7	Rubber hose, Inlet manifold						7700				13700			
8	Rear Chain					Adjust every 621 miles or earlier as required								16700
9						Lubricate every 621 miles or earlier as required								
10	Front Fork oil						7700				13700			
11						Check level every 621 miles or earlier as required								
12	Swing Arm spacer & pivot										13700			
13	Carburettor						Clean, Inspect and Tune							

**A : Adjust**

		Miles Kms(x1000)	310 0.5	1864 3	3728 6	5592 9	7456 12	9320 15	11184 18	13048 21	14912 24	16777 27	18641 30
1	Spark plug - 2nos.	1700	3200	4700	6200	7700	9200	10700	12200	13700	15200	16700	
2	Carburettor						Clean, Inspect and Tune						
3	Fuel hose				6200				12200				
4	Accelerator and carburetor cable play Adjustment	1700	3200	4700	6200	7700	9200	10700	12200	13700	15200	16700	
5	Steering ball races / Play			4700					12200			16700	
6	Clutch free play					Adjust every 621 miles or earlier as required						16700	
7	Rear Chain					Adjust every 621 miles or earlier as required						16700	
						Lubricate every 621 miles or earlier as required							
8	Rear brake play					Adjust every 621 miles or earlier as required							

**L : Lubricate**

[illegible]

**C : Clean**

	Miles	310	1864	3728	5592	7456	9320	11184	13048	14912	16777	18641
	Kms(x1000)	0.5	3	6	9	12	15	18	21	24	27	30
1	Engine suction filter and Secondary drain magnetic plug	1700		4700		7700		10700		13700		16700
2	Air filter element	1700	3200	4700	6200		9200	10700	12200		15200	16700
3	Fuel Tap	1700	3200	4700	6200	7700	9200	10700	12200	13700	15200	16700
4	Fuel tank		3200		6200		9200		12200		15200	
5	Battery terminals (apply petroleum jelly)	1700	3200	4700	6200	7700	9200	10700	12200	13700	15200	16700
6	Carburettor						Clean, inspect and Tune					

**I : Inspect**

		Miles Kms(x1000)	310 0.5	1864 3	3728 6	5592 9	7456 12	9320 15	11184 18	13048 21	14912 24	16777 27	18641 30
1	HT leads for crack		1700	3200	4700	6200	7700	9200	10700	12200	13700	15200	16700
2	Fuel hose		1700	3200	4700		7700	9200	10700		13700	15200	
3	Rubber hose, Air filter to Carburettor		1700	3200	4700	6200		9200	10700	12200		15200	16700
4	Rubber hose, Inlet manifold		1700	3200	4700	6200		9200	10700	12200		15200	16700
5	Inlet / Exhaust valve seating						7700					15200	
6	Battery Electrolyte level			3200	4700	6200	7700	9200	10700	12200	13700	15200	16700
7	Earth wire eyelet (behind battery carrier)						7700						16700
8	Front Fork oil				4700				10700				16700
							Check level every 621 miles or earlier as required						
9	Spokes tightness & Wheel rim run out front / rear		1700	3200		6200		9200		12200		15200	16700
10	Tyre wear			3200	4700	6200	7700	9200	10700	12200	13700	15200	16700

**D : De-carbonise**

[illegible]